







 
 


























 






















E800 RFID IP Phone Quick User Guide

E800 RFID IP 電話簡易操作指南

| | | |
|--------------------------------|----------------------------|--|
| Intercom Call 內線電話 | |  →  →  |
| Outgoing Call 街線電話 | |  →  →  →  |
| Call Hold 來電暫泊 | |  →  |
| Call Hold Retrieve 重取暫泊來電 | |  →  |
| Call PickUp - Group 截聽同組來電 | |  →  →  |
| Call Transfer 轉駁來電 | |  →  →  →  |
| Call Log – Missed 未接來電清單 | When “Missed Call” Display |  →  →  →  →  |
| Call Log – All Calls 所有來電清單 | |  →  →  →  →  |
| Last Number Redial 重撥剛撥號碼 | |  →  →  →  |
| Conference 會議電話 | Setup 建立 |  →  →  |
| | Add New Party 加入新成員 |  →  →  →  →  →  |
| | Terminate 結束會議 |  →  |
| Volume 音量控制 | Speakerphone 免提 |  →  →  |
| | Handset 話筒 |  →  →  |
| | Ring 鈴聲 |  →  →  |
| Symbol 圖例 | |  Ringing 正在振鈴  Pickup Handset 提起聽筒  Replace Handset 放下聽筒  Talking 通話中  In a conference 會議中 |

